» Information » Structure » Specification Table » Installation Instructions



Information





Side Clearance | 7.5 mm (functional space) maximum chassis width 438 mm.


Height | 41.0 mm

Loading | 75 pound (35 kgs) class for 1000 cycles in 26" long

Feature | SB Tool-less, lock out

Finish | RoHS compliant zinc plating

■ Range Side View Drawer

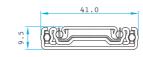

■ Surface Treatment

■ Clear Zinc
■ Black E. Coating


■ Black Zinc
■ White E Coating

■ Stainless Steel

■ Packaging

■ Retail

Structure

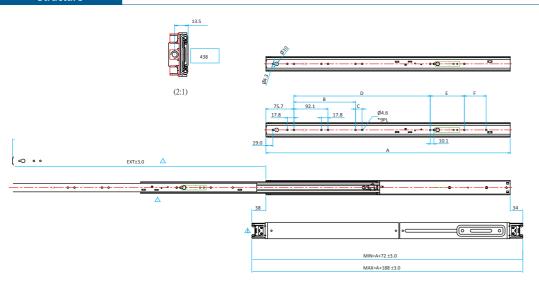

■ Section



■ Component Parts




Specification Table

	SIZE							EXT
20"	(500mm)	508.0			276.3	92.1		532.7
22"	(550mm)	558.0	166.4	17.8	317.2		55.0	583.2
24"	(600mm)	609.6	166.4	17.8	368.4	92.1		634.3
26"	(650mm)	660.4	166.4	17.8	368.4	92,1	55.0	685.1
28"	(700mm)	711.0	166.4	17.8	460.5	92.1		735.9
30"	(750mm)	762.0	166.4	17 0	460.5	021	55.0	706 7


Installation Instructions

QUICK INSTALLATION GUIDE OF NJ-21G58

Samurai Tool-Less Server Slide, 75 pound (35 kgs) loading

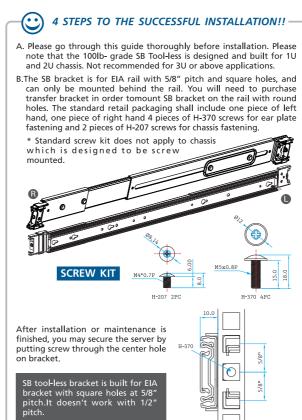

Step **1** > Remove the chassis (inner) member

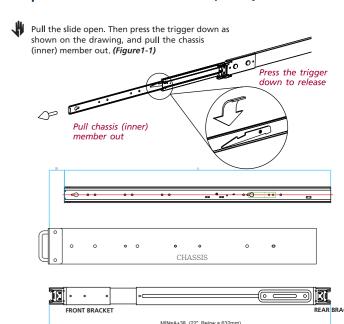


**Extendable front bracket only apply to some Tool-less model $$\operatorname{\underline{EXT}=300MM}$$

Step 2 > Mount the chassis (inner) member to the chassis

₩ Y


You may opt for M4 or M5 pan head screw. The screw head of either M4 or M5 can not exceed 2.0 mm. Alternatively, you may mount the


slide member to the chassis through standoffs. Likewise, the head of stand-off can not exceed 2.0 mm. Each side of chassis is highly suggested to use 3 of screws or standoffs for slide attachment.

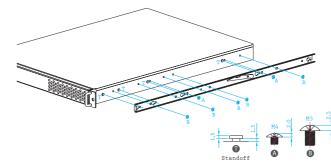

Step 3 > Attach the cabinet (outer) member to the rail

Insert the stag into the upper and lower square holes on EIA rail from the back of rail.

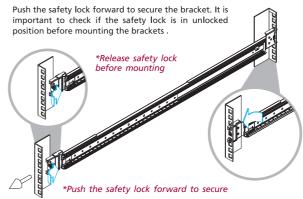

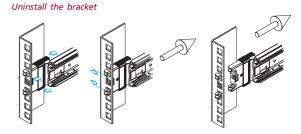

Step $oldsymbol{3}$ > Mount the chassis into the cabinet

Insert the chassis (inner) member into the cabinet member as shown on the drawing. It is important to check if the ball retainer is in fully open position before install the chassis.

It might cause catastrophic damage to the chassis if ball retainer is not in fully open position while mounting the chassis. While you are pushing chassis back to the cabinet, you need to release the slide from locking position by pressing the trigger down.

