




» Information » Structure » Specification Table » Installation Instructions

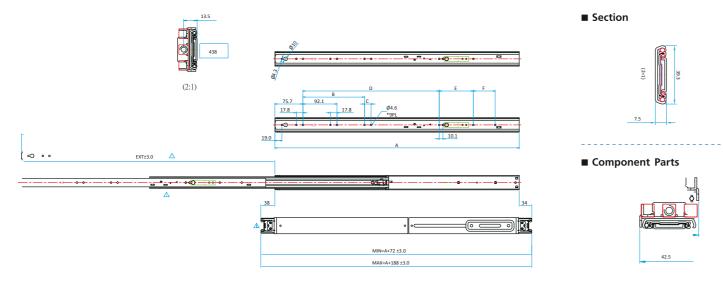

Structure




Specification Table

				,				
	SIZE							EXT
20"	(500mm)	508.0			276.3	92.1		532.7
22"	(550mm)	558.0	166.4	17.8	317.2		55.0	583.2
24"	(600mm)	609.6	166.4	17.8	368.4	92.1		634.3
26"	(650mm)	660.4	166.4	17.8	368.4	92,1	55.0	685.1
28"	(700mm)	711.0	166.4	17.8	460.5	92.1		735.9
30"	(750mm)	762.0	166.4	17.8	460.5	92,1	55.0	786.7


Installation Instructions

QUICK INSTALLATION GUIDE OF NJ-21G58

Samurai Tool-Less Server Slide, 75 pound (35 kgs) loading

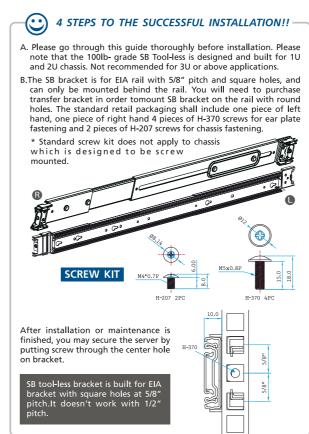

Step 1 > Remove the chassis (inner) member

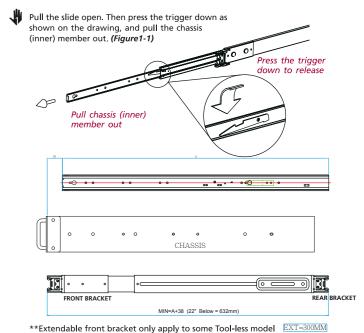


Step 2 > Mount the chassis (inner) member

to the chassis


You may opt for M4 or M5 pan head screw. The screw head of either M4 or M5 can not exceed 2.0 mm. Alternatively, you may mount the


slide member to the chassis through standoffs. Likewise, the head of stand-off can not exceed 2.0 mm. Each side of chassis is highly suggested to use 3 of screws or standoffs for slide attachment.

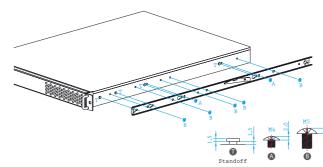

Step 3 > Attach the cabinet (outer) member to the rail

Insert the stag into the upper and lower square holes on EIA rail from the back of rail.

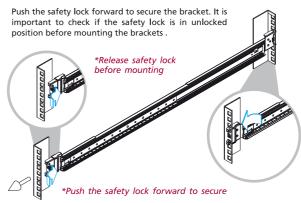

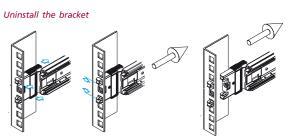

Step 3 > Mount the chassis into the cabinet

Insert the chassis (inner) member into the cabinet member as shown on the drawing. It is important to check if the ball retainer is in fully open position before install the chassis.

It might cause catastrophic damage to the chassis if ball retainer is not in fully open position while mounting the chassis. While you are pushing chassis back to the cabinet, you need to release the slide from locking position by pressing the trigger down.

