



**STORMSHIELD**



GUIDE

**STORMSHIELD NETWORK SECURITY**

# SNI50 QUICK INSTALLATION GUIDE

Document last updated: June 25, 2026

Document version: 1.0

Reference: [sns-en-SNi50\\_quick\\_installation\\_guide](#)



# Table of contents

---

Getting started .....	3
Installing the firewall .....	4
Installing the firewall on DIN rails .....	4
Fastening the firewall against a wall .....	4
Starting the firewall .....	5
Plugging in the firewall .....	5
Connecting to the firewall .....	6
Troubleshooting .....	6
Shutting down the firewall .....	7
Documentation .....	8



## Getting started

---

Welcome to the SNI50 firewall quick installation guide.

Before you install your Stormshield Network Security firewall, carefully read and follow the safety instructions given in the document [Safety Rules and Installation Precautions](#) corresponding to your model.

The packaging contains:

- Your Stormshield Network Security firewall,
- A 6-pole threaded connector,
- An RJ45 to RS232 serial cable,
- A USB-C to USB-A cable.



## Installing the firewall

Take note of the registration password and serial number indicated on the underside of the firewall. You will need them during installation.


### Installing the firewall on DIN rails

Install the firewall by using the DIN rails that are screwed onto it. Refer to the section [Installation in a 19" cabinet and rack](#) in the *SNS range presentation and installation guide* for more information.



### Fastening the firewall against a wall

Refer to the section [Installation in a 19" cabinet and rack](#) in the *SNS range presentation and installation guide* for more information.

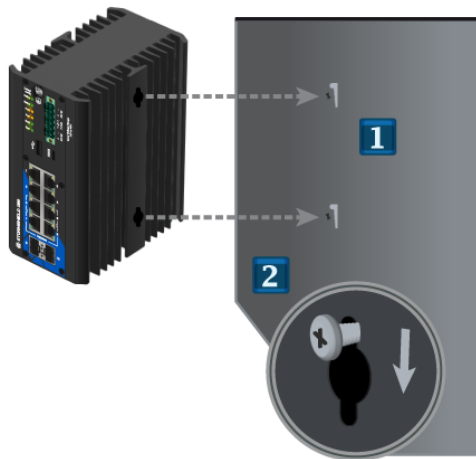




# Starting the firewall

## Plugging in the firewall


1. Connect the firewall to its power supply. For more information, refer to the section [Installation precautions](#) in the *SNS range presentation and installation guide*.

**! IMPORTANT**

For installations in a cabinet, equipment has to be reliably earthed. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of terminal blocks)

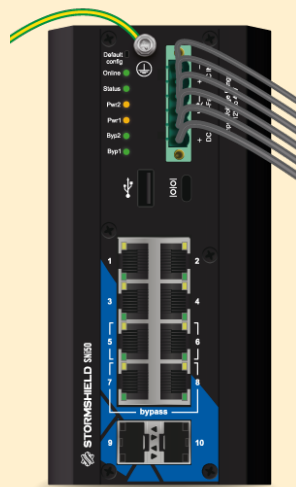


Once your firewall has been powered up, it will automatically start up. Wait for several minutes until the *Status* LED lights up.

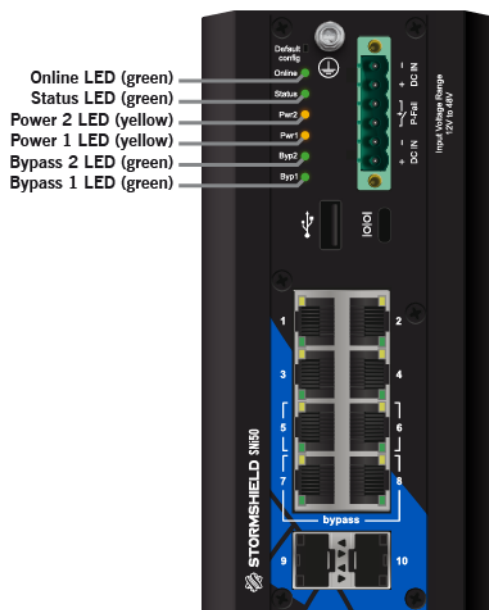



2. Connect the network ports as follows:
  - External interface on port 1 (OUT),
  - Internal interface (administration interface) on port 2 (IN).

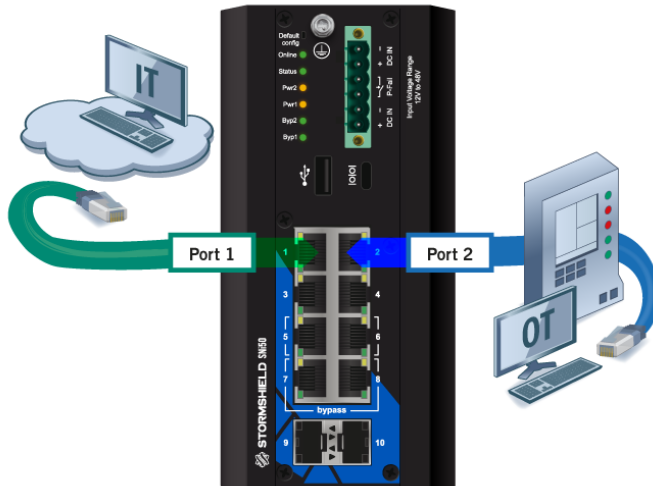

## Connecting to the firewall

1. Using your client workstation, log in to the administration interface at the following address: <https://10.0.0.254/admin>.
2. Enter **admin** as the login and password.
3. During the initial connection, a warning message may appear in your browser. Confirm that you wish to continue accessing the administration interface.

When you encounter hardware issues on your firewall, or if any of the components does not match its description, contact your certified partner.

For more information on the initial configuration of the firewall, refer to the [SNS firewall installation and first-time configuration guide](#).

## Troubleshooting

### I am unable to connect to my firewall

Check the configuration on your client workstation. DHCP has to be enabled on this client workstation, or its IP address has to belong to the same address range as the firewall's (10.0.0.0/8).

### I am unable to access the administration interface

If you have connected your client workstation over port 1, you will no longer be able to access the administration interface To resolve this issue:

1. Connect your client workstation over port 2.
2. Log in to the firewall in console mode (refer to the [SNS range presentation and installation guide](#)).
3. Restart the firewall.



## Shutting down the firewall

---

1. Log in to the administration interface.
2. Go to **Configuration > System > Maintenance > Configuration**.
3. Click on **Shut down the firewall**.
4. Wait for several minutes until the *Power* LED turns yellow.



## Documentation

---

Log in to the following address to access your MyStormshield personal area, or to create one:  
<https://www.mystormshield.eu>.

Your personal area allows you to:

- Register your product,
- Activate and manage your user licenses and software options,
- Download the latest updates,
- Subscribe to technical and marketing mailing lists.

You can access the technical support department's Knowledge Base from your personal area or the following address: <https://kb.stormshield.eu>.

Documentation on Stormshield Network firewalls can be accessed online, offering various resources (user guides, technical notes, etc.) : <http://documentation.stormshield.eu>.

For more information, refer to the [Product presentation and installation guide](#).



**STORMSHIELD**

[documentation@stormshield.eu](mailto:documentation@stormshield.eu)

*All images in this document are for representational purposes only, actual products may differ.*

*Copyright © Stormshield 2026. All rights reserved. All other company and product names contained in this document are trademarks or registered trademarks of their respective companies.*